

# User Manual



## Pan/Tilt/Zoom IP Camera



**WARNINGS**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.  
DO NOT INSERT ANY METALLIC OBJECT THROUGH VENTILATION GRILLS.

**CAUTION**

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

**COPYRIGHT**

THE TRADEMARKS MENTIONED IN THE MANUAL ARE LEGALLY REGISTERED TO THEIR RESPECTIVE COMPANIES.

# Content

<b>I. PREFACE</b> .....	<b>4</b>
<b>II. PRODUCT SPECIFICATIONS</b> .....	<b>4</b>
<b>III. PRODUCT INSTALLATION</b> .....	<b>6</b>
A. MONITOR SETTING.....	6
B. HARDWARE INSTALLATION .....	8
C. IP ASSIGNMENT .....	9
D. INSTALL ACTIVE X CONTROL:.....	12
<b>IV. LIVE VIDEO</b> .....	<b>14</b>
<b>V. IP CAMERA CONFIGURATION</b> .....	<b>17</b>
A. SYSTEM.....	18
B. NETWORK .....	21
C. A/V SETTING .....	26
D. EVENT LIST.....	32
<b>VI. NETWORK CONFIGURATION</b> .....	<b>36</b>
<b>VII. I/O CONFIGURATION</b> .....	<b>37</b>
<b>VIII. FACTORY DEFAULT</b> .....	<b>39</b>
<b>IX. PACKAGE CONTENTS</b> .....	<b>39</b>
<b>APPENDIX I</b> .....	<b>39</b>

**V1.0 2009/12/09**

## I. Preface

This IP Camera is a Pan/Tilt/Zoom IP camera. It has the web server built in. User can view real-time video via IE browser. IP Camera supports simultaneously H.264, JPEG & MPEG4 (3GPP Only) video compression and dual streaming which provides smooth and high video quality. The Pan/Tilt/Zoom function can be controlled remotely. The video can be stored in the SD card, and playback remotely. With user friendly interface, it is an easy-to-use IP camera which is designed for security application.

## II. Product Specifications

1. Remote Pan(270° )Tilt(120° )Zoom(12x opt)control
2. H.264/ JPEG/ MPEG4 (3GPP only)
3. True Day/Night Function – IR Cut Filter (ICR)
4. Power over Ethernet available
5. Support SD card
6. 2-Way Audio
7. Triple Streaming
8. Support Cell Phone/PDA/3GPP
9. Wireless available
10. SDK for Software Integration
11. Free 36ch bundled Recording Software

### Specifications

Hardware	
CPU	ARM 9 ,32 bit RISC
RAM	128MB
ROM	8MB
Video Out	1 (RCA type)
Audio In/Out	1 in/1 out (3.5 mm Phone Jack )
Alarm I/O	1 in/ 1 out

Power Consumption	LAN: DC 12V 510mA
Dimensions (W×L×H)	105(W)x157(L)x105(H) mm
Weight	550g
Operating Temperature	-10° C ~ 40° C
Image sensor	1/4" CCD
Lens type	Auto focus zoom lens
Sensitivity	0.1 lux @F1.6
Electronic shutter	1/50(1/60) ~ 1/100000s
White balance mode	ATW , AWB , Indoor , Outdoor
Zoom ratio	12X optical zoom
Focal length	f(wide)3.8 to f(tele)45.6mm
Maximum aperture	F(wide) = 1:1.6 , F(tele) = 1:2.7
Angle View(H,V)	Wide : 52.8 <sup>0</sup> , 39.7 <sup>0</sup>
	Tele : 4.49 <sup>0</sup> , 3.40 <sup>0</sup>
Pan angle	270 <sup>0</sup>
Tilt angle	120 <sup>0</sup>
Other Function	Day/Night with ICR , BLC
<b>Network</b>	
Ethernet	10/ 100 Base-T
Wireless	802.11b/g (Optional)
WEP	64/ 128 bit
Network Protocol	HTTP, TCP/ IP, UDP,SMTP, FTP, PPPoE, DHCP, DDNS, NTP, 3GPP,UPnP
<b>System</b>	
Video Resolution	NTSC: 720x480, 704x480,352x240, 176x144 PAL: 720x576, 704x576,352x288, 176x144
Video adjust	Brightness, Contrast, Saturation, Hue, Sharpness
Triple Streaming	Yes
Image snapshot	Yes
Full screen monitoring	Yes
Privacy Mask	Yes, 3 different areas
Pan/Tilt/Zoom control	Yes, remotely
Preset Point	9
Patrol	Yes(Once)

Auto Pan	Yes(Once)
Compression format	H.264/ JPEG/ MPEG4 (3GPP only)
Video Bitrate Adjust	CBR, VBR
Motion Detection	Yes, 3 different areas
Triggered action	Mail, FTP, Save to SD card, Alarm
Pre/ Post alarm	Yes, configurable
Security	Password protection
Firmware upgrade	HTTP mode, can be upgraded remotely
Simultaneous connection	Up to 10
Audio	Yes, 2-way
SD card management	
Recording trigger	Motion Detection, IP check, Network break down (Wire connection),Alarm
Video format	AVI,JPEG
Video playback	Yes
Delete files	Yes
Client system requirement	
OS	Windows 2000, XP, 2003, IE 6 or above
Hardware	
Suggested	Intel Dual Core 1.66G, RAM: 1024MB, Graphic card: 128MB
Minimum	Intel-C 2.8G, RAM: 512MB, Graphic card: 64MB


## III. Product Installation

### A. Monitor Setting

- i. Right-Click on the desktop. Select “ Properties”



ii. Change color quality to highest (32bit).

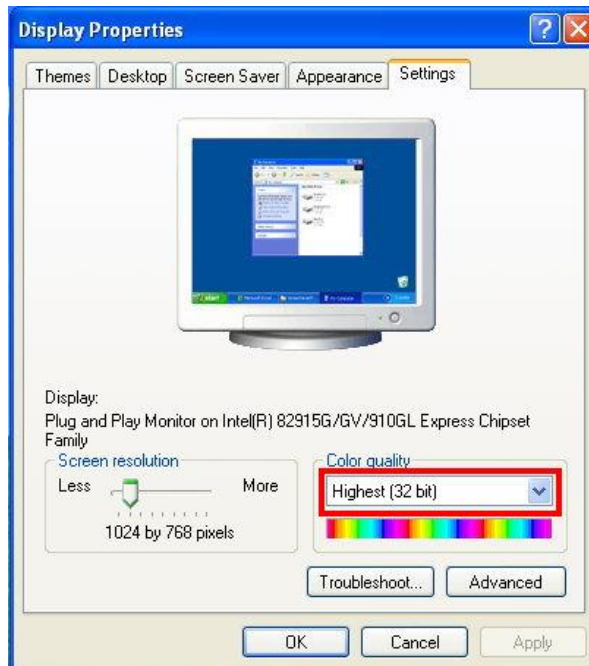

## B. Hardware Installation


- i. Connect power adaptor



- ii. Connect IP Camera to PC or network with Ethernet cable




- iii. Connect IP Camera to PC or network
- iv. Set up the network configurations according to the network environment.  
For further explanation, please refer to chapter VI, “Network Configuration for IP Camera”.
- v. Back Panel for your reference

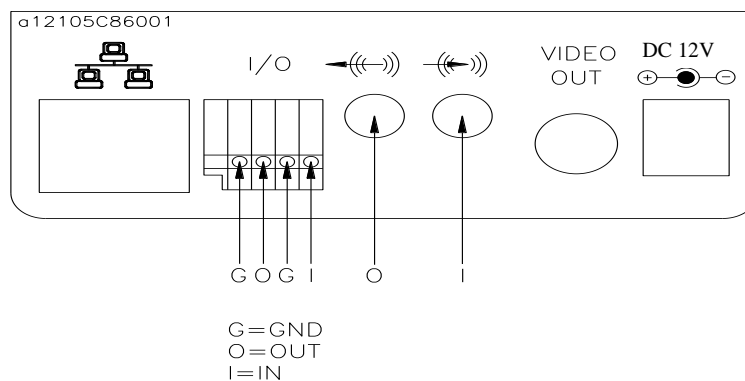

- vi. PoE ( Power Over Ethernet)(Optional) **802.3af, 15.4W PoE Switch is recommended**

Power over Ethernet (PoE) is a technology that integrates power into a standard LAN infrastructure. It enables power to be provided to the network device, such as an IP phone or a network camera, using the same cable as that used for network connection. It eliminates the need for power outlets at the camera locations and enables easier application

of uninterruptible power supplies (UPS) to ensure 24 hours a day, 7 days a week operation.

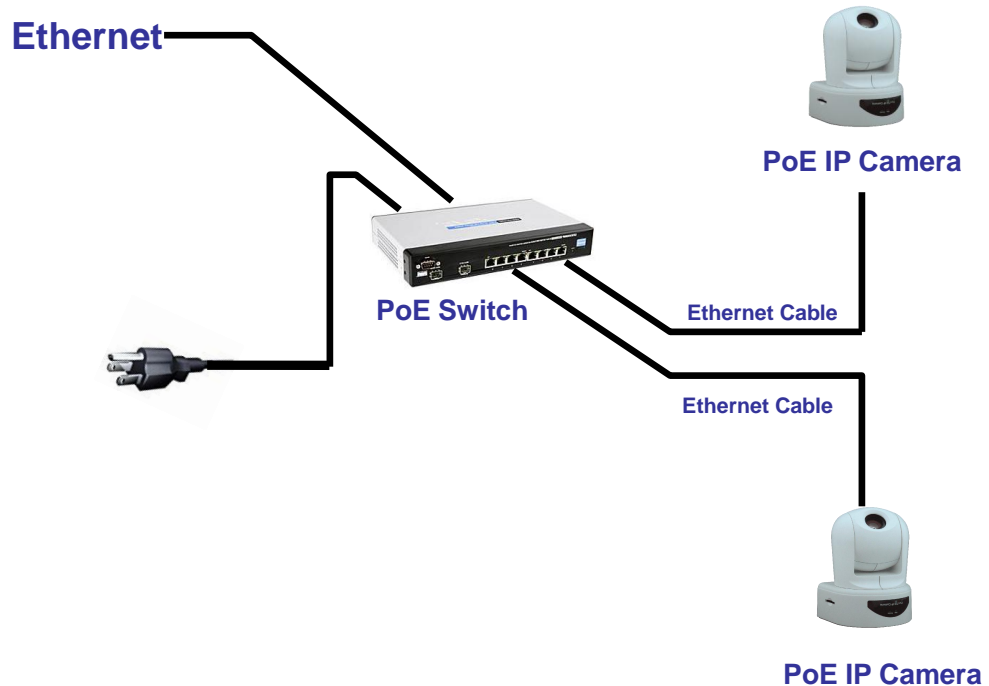


## C. IP Assignment

- i. Use the software, "IP Installer" to assign the IP address of IP Camera. The software is in the attached CD.
- ii. There are two languages for the IP installer
  - a. IPInstallerCht.exe : Chinese version
  - b. IPInstallerEng.exe : English version
- iii. There are 3 kinds of IP configuration.
  - a. Fixed IP (Public IP or Virtual IP)
  - b. DHCP (Dynamic IP)
  - c. Dial-up (PPPoE)
- iv. Execute IP Installer


- v. For Windows XP SP2 user, it may popup the following message box. Please click “Unblock”.



- vi. IP Installer configuration:

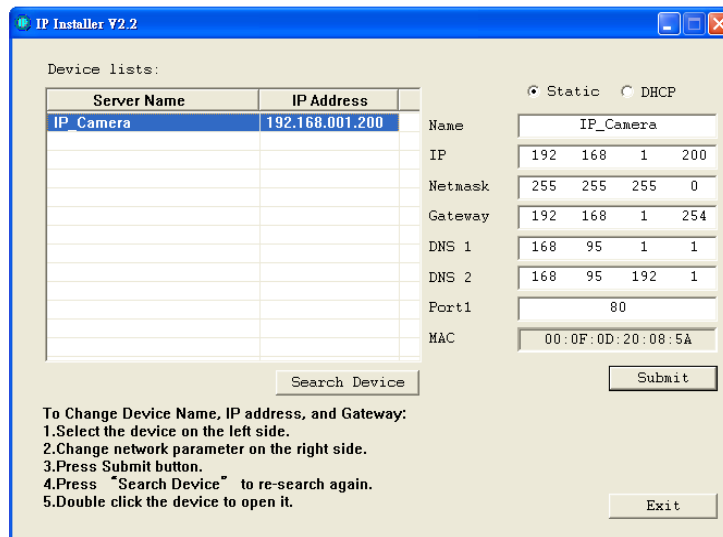

- vii. IP Installer will search all IP Cameras connected on Lan. The user can click “Search Device” to search again.
- viii. Click one of the IP Camera listed on the left side. The network configuration of this IP camera will show on the right side. You may change the “name” of the IP Camera to your preference (eg: Office, warehouse). Change the parameter and click “Submit” then click “OK”. It will apply the change and reboot the Device.

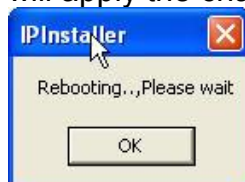

- ix. Please make sure the subnet of PC IP address and IP CAM IP address are the same.

**The same Subnet:**

IP CAM IP address: 192.168.1.200

PC IP address: 192.168.1.100

**Different Subnets:**


IP CAM IP address: 192.168.2.200

PC IP address: 192.168.1.100


**To Change PC IP address:**

**Control Panel**→**Network Connections**→**Local Area Connection Properties**→**Internet Protocol (TCP/IP)** →**Properties**

Please make sure your IP Camera and PC have the same Subnet. If not, please change IP Camera subnet or PC IP subnet accordingly.

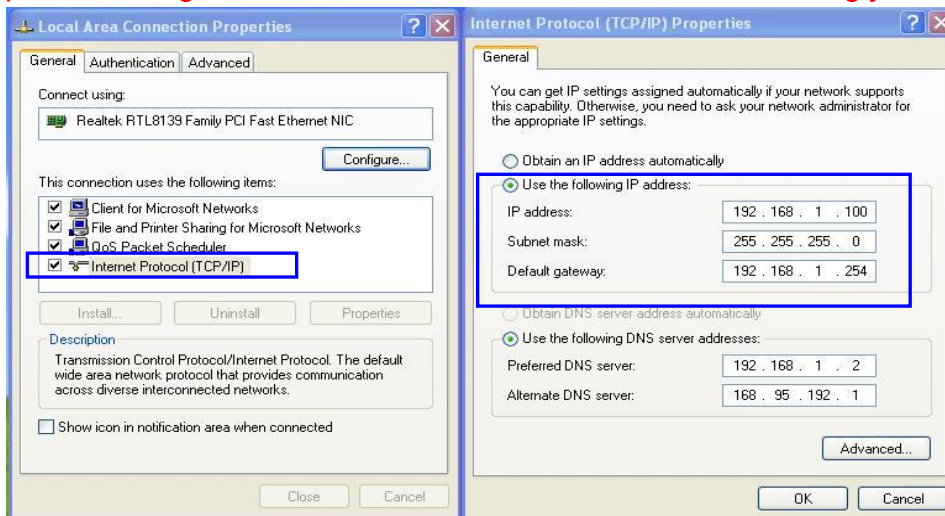

- x. A quick way to access remote monitoring is to left-click the mouse twice on a selected IP Camera listed on “Device list” of IP Installer. An IE browser will be opened.

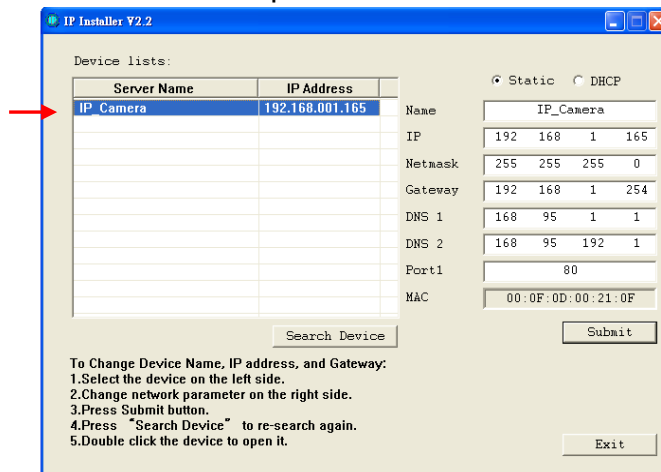

- xi. Then, please key in the default “user name: admin” and “password: admin”.



## D. Install ActiveX control:

For the first time to view the camera video via IE, it will ask you to install the ActiveX component.


If the installation failed, please check the security setting for the IE browser.

- i. IE → Tools → Internet Options... → Security Tab → Custom Level... → Security Settings → Download unsigned ActiveX controls → Select "Enable" or Prompt.
- ii. IE → Tools → Internet Options... → Security Tab → Custom Level... → Initialize and script ActiveX controls not marked as safe → Select "Enable" or Prompt.


1



2

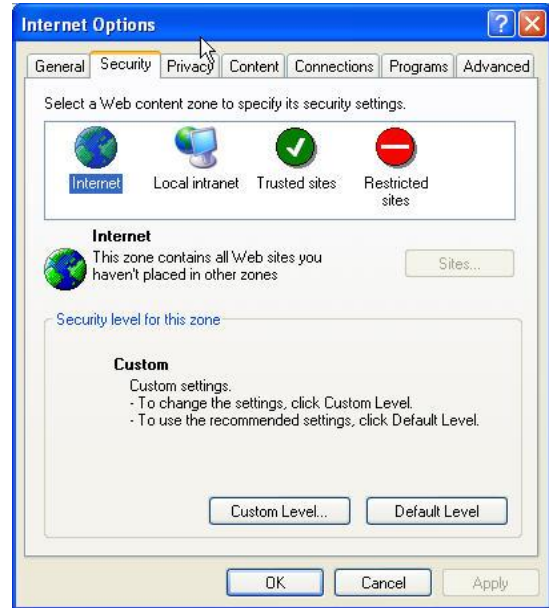

3

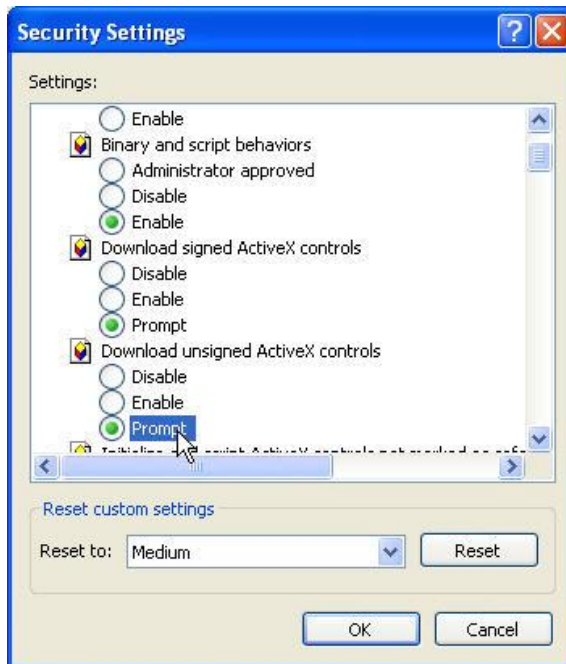


4



5

When popup the following dialogue box, click "Yes".

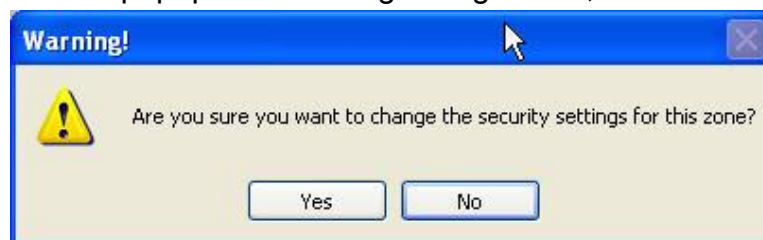




## IV. Live Video

Start an IE browser, type the IP address of the IP camera in the address field. It will show the following dialogue box. Key-in the user name and password. The default user name and password are “**admin**” and “**admin**”.

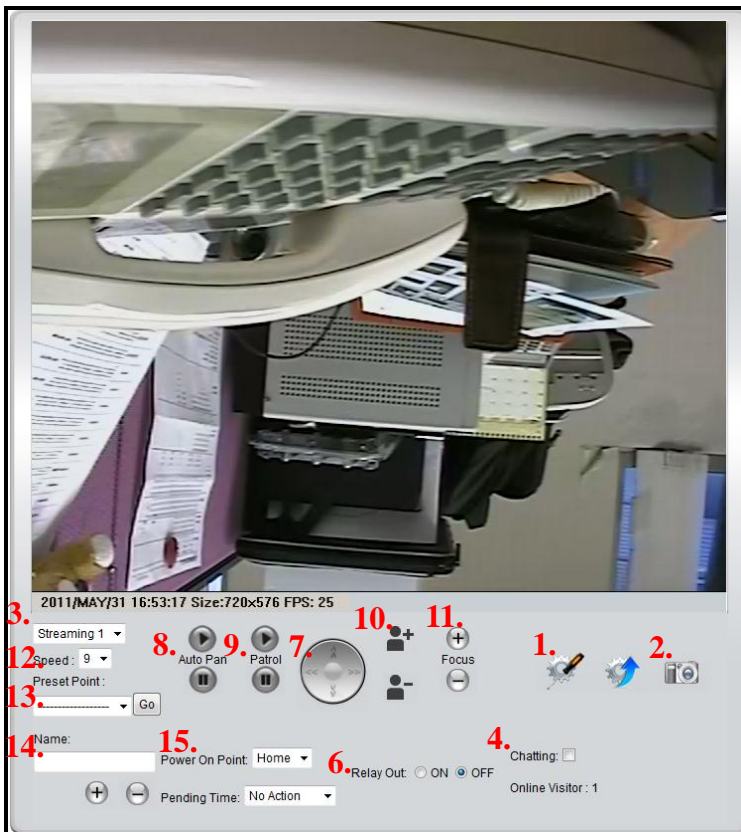


When connect to the IP Camera ◦ The following program interface shows.



1.  : Get into the administration page
2.  : Video Snapshot
3. Show system time, video resolution, and video refreshing rate
4. Select video streaming source **(When streaming 2 setting in 『Video Setting』 is closed, this function will not display)**
5. IP Camera supports 2-way audio. Click the “Chatting” check box. Then you can use microphone which connect to the PC to talk to server side, which is IP Camera side.
6. Shows how many people connect to this IP camera
7. Relay out: On or Off
8. Pan Tilt control of this IP camera
9. Zoom : Digital zoom in/out
10. Focus: Manually
11. Auto Pan : The camera will pan horizontally.
12. Patrol : The camera will move along with the preset points.
13. Speed : The speed of the camera move.
14. Preset Point
15. Set up the name of the preset point
16. Add/ remove preset point


Double-click the video, it will change to full screen mode. Press “Esc” or double-click the video again, it will change back to normal mode.

Right-Click the mouse on the video, it will show a pop-up menu.

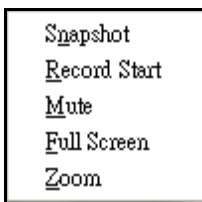



1. Snapshot : Save a JPEG picture
2. Record Start : Record the video in the local PC. It will ask you where to save the video. To stop recording, right-click the mouse again. Select “Record Stop”. The video format is AVI. Use Microsoft Media Player to play the recorded file.
3. Mute : Turn off the audio. Click again to turn on it.

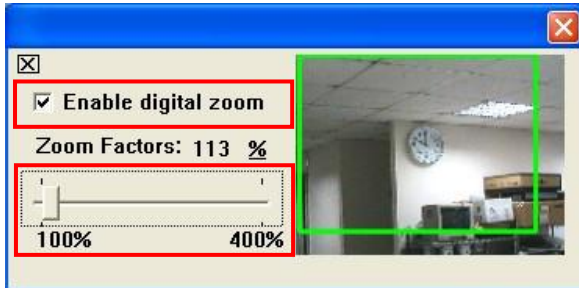4. Full Screen : Full-screen mode.
5. ZOOM: Enable zoom-in and zoom-out functions. Select “Enable digital zoom” option first within the pop-up dialogue box and then drag and drop the bar to adjust the zoom factors.




# V. IP Camera Configuration



Click  to get into the administration page. Click  to back to the live video page.



System
Network
A/V Setting
Event



System Information

Server Information

MAC Address:

Server Name:   Status Bar

LED Indicator:  ON  OFF

Language :  English  繁體中文  简体中文  French  
 Russian  Italian  Spanish  German  
 Portuguese  Polish

OSD Setting

Time Stamp:  Enabled  Disabled

Text:  Enabled  Disabled

**OSD\_Display** [Text Edit](#)

Time Setting

Server Time: 2011/5/31 17:10:10 Time Zone: GMT+08:00

Date Format:  yy/mm/dd  mm/dd/yy  dd/mm/yy

Time Zone:

NTP :

NTP Server:

Update :  Hour

Time Shift :  Minutes [-1440..1440]

Synchronize with PC's time

Date :

Time :

Manual

Date :

Time :

The date and time remain the same

17/39

AXETECH Group Distributor Official For BENELUX Tél. + 32 2 332 01 11 Fax. + 32 2 332 03 11 info@axetech.be

## A. System

### i. System Information

- a. Server Information : Set up the camera name, select language, and set up the camera time.
  1. Server Name : This is the Camera name. This name will show on the IP Installer.
  2. Select language : There are English, Traditional Chinese, and Simple Chinese to select. When change, it will show the following dialogue box for the confirmation of changing language.



- b. OSD Setting: Select a position where date & time stamp / text showing on screen.



Moreover, click Text Edit can entry to adjust the OSD contents which is including Size and Alpha of text. Finally, click **Upgrade** button to reserve the setting.



- c. Server time setting : Select options to set up time - “NTP”, “Synchronize with PC’s time”, “Manual”, “The date and time remain the same”.

**Time Setting**

Server Time: 2007/4/11 14:56:01 Time Zone: GMT+08:00

Date Format:  yy/mm/dd  mm/dd/yy  dd/mm/yy

Time zone: GMT+08:00

NTP :  
 NTP Server :

Synchronize  
 Date :   
 Time :

Manual  
 Date :   
 Time :

The date and time are the same

**Apply**

ii - User Management

IP Camera supports three different users, administrator, general user, and anonymous user.

**User Management**

**Anonymous User Login**

YES  NO **Setting**

**Add User**

Username:

Password:

Confirm:

UserGroup:  PTZ  Guest **Add/Set**


**User List**

Username	User Group	Modify	Remove
admin	Administrator	Edit	Remove
1111	Guest	Edit	Remove
2222	PTZ	Edit	Remove

- a. Anonymous User Login :  
 Yes : Allow anonymous login  
 No : Need user name & password to access this IP camera
- b. Add user :  
 Type the user name and password, then click "Add/Set".
- c. Click "edit" or "delete" to modify the user.



iii 、 System update :

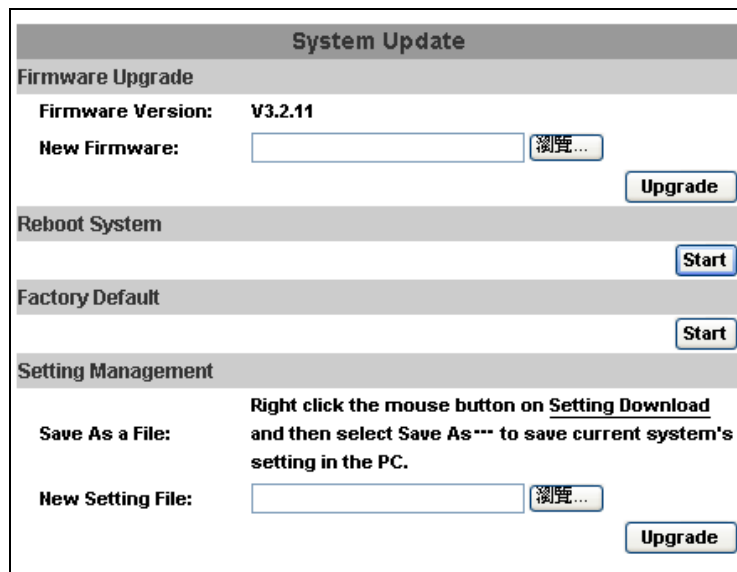

- a. To update the firmware online, click “Browse...” to select the firmware. Then click “Upgrade” to proceed.
- b. Reboot system : re-start the IP camera
- c. Factory default : delete all the settings in this IP camera.
- d. Setting Management : User may download the current setting to PC, or upgrade from previous saved setting.
  1. Setting download:  
Right-click the mouse button on Setting Download → Select “Save AS...” to save current IP CAM setting in PC → Select saving directory → Save
  2. Upgrade from previous setting  
Browse → search previous setting → open → upgrade → Setting update confirm → click **index.html**. to return to main page

## B. Network


### i. IP Setting

IP Camera supports DHCP and static IP.

IP Setting	
<b>IP Assignment</b>	
<input type="radio"/> DHCP	
<input checked="" type="radio"/> Static	
IP Address:	<input type="text" value="192.168.1.200"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Gateway:	<input type="text" value="192.168.1.254"/>
DNS 0:	<input type="text" value="168.95.1.1"/>
DNS 1:	<input type="text" value="168.95.192.1"/>
<b>Port Assignment</b>	
Web Page Port:	<input type="text" value="80"/>
RTSP Port :	<input type="text" value="554"/>
RTP Start Port:	<input type="text" value="5000"/> [1024..10000]
RTP End port:	<input type="text" value="9000"/> [1025..10000]
<b>UPnP</b>	
UPnP:	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
<input type="button" value="Apply"/>	

- a. DHCP: Using DHCP, IP CAMERA will get all the network parameters automatically.
- b. Static IP: Please type in IP address, subnet mask, gateway, and DNS manually.
- c. Port assignment:
  1. Web Page Port: setup web page connecting port and video transmitting port (Default: 80)
  2. RTSP Port: setup port for RTSP transmitting (Default: 554)
  3. RTP Start and End Port: in RTSP mode, you may use TCP and UDP for connecting. TCP connection uses RTSP Port (554). UDP connection uses RTP Start and End Port.
- d. UPnP (Universal Plug and play): Display UPnP device icon in 『My Network Places』 for hyper link.

ii 、 PPPoE :

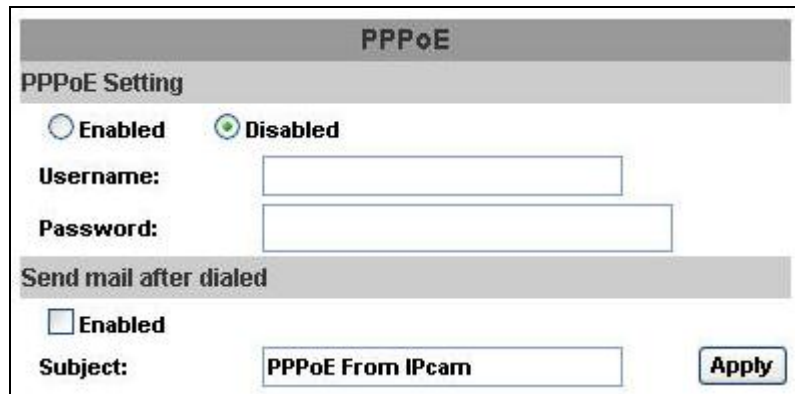

Select “Enabled” to use PPPoE.


Key-in Username and password for the ADSL connection.

Send mail after dialed : When connect to the internet, it will send a mail to a specific mail account. For the mail setting, please refer to “Mail and FTP” settings.

iii 、 DDNS :

IP Camera supports DDNS (Dynamic DNS) service.

a. DynDNS :

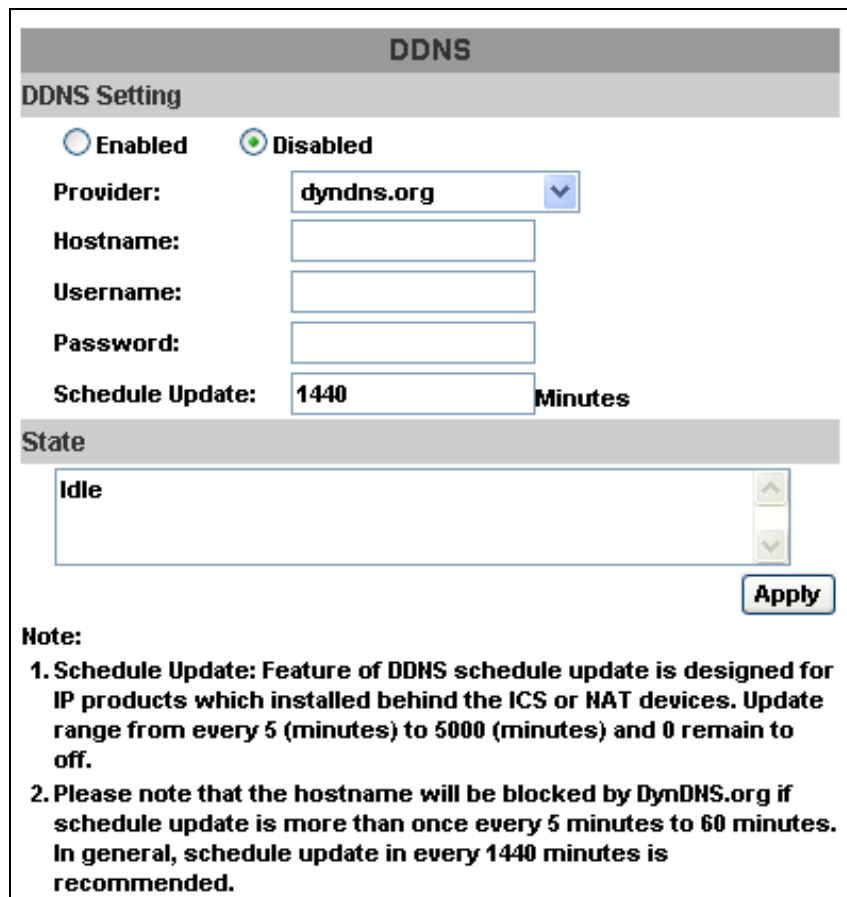


**Note:**

- Schedule Update:** Feature of DDNS schedule update is designed for IP products which installed behind the ICS or NAT devices. Update range from every 5 (minutes) to 5000 (minutes) and 0 remain to off.
- Please note that the hostname will be blocked by DynDNS.org if schedule update is more than once every 5 minutes to 60 minutes. In general, schedule update in every 1440 minutes is recommended.

1. Enable this service
2. Key-in the DynDNS server name, user name, and password.
3. Set up the IP Schedule update refreshing rate.
4. Click “Apply”
5. If setting up IP schedule update too frequently, the IP may be blocked. In general, schedule update every day (1440 minutes) is recommended.

b. Camddns service :

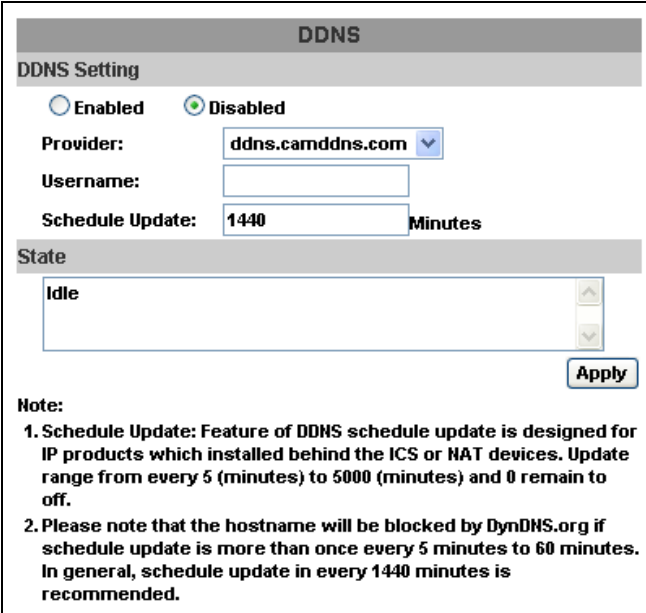

**DDNS**

**DDNS Setting**

Enabled  Disabled

Provider:

Username:

Schedule Update:  Minutes

**State**

**Note:**

1. Schedule Update: Feature of DDNS schedule update is designed for IP products which installed behind the ICS or NAT devices. Update range from every 5 (minutes) to 5000 (minutes) and 0 remain to off.
2. Please note that the hostname will be blocked by DynDNS.org if schedule update is more than once every 5 minutes to 60 minutes. In general, schedule update in every 1440 minutes is recommended.

1. Please enable this service
2. Key-in user name
3. IP Schedule update is default at 1440 minutes
4. Click “Apply”.

c. DDNS Status

1. Updating : Information update
2. Idle : Stop service
3. DDNS registration successful, can now log by <http://<username>.ddns.camddns.com> : Register successfully.
4. Update Failed, the name is already registered : The user name has already been used. Please change it.
5. Update Failed, please check your internet connection : Network connection failed.
6. Update Failed, please check the account information you provide : The server, user name, and password may be wrong

iv 、 Wireless Setting (Wireless Network Optional)

Supports 802.11 b/g wireless connection.

Notice : Wireless network and Ethernet network use the same IP, the user has to unplug Ethernet cable, if Ethernet cable is not unplug, wireless setting can not be executed.

Wireless Setting			
Status of Wireless Networks			
SSID	Mode	Security	Signal strength
allan	Infrastructure	WPA	79
RHOSON	Infrastructure	WEP	16
Link	Infrastructure	OFF	16
SinoStar	Infrastructure	WEP	11
7f-2	Infrastructure	WEP	12
00160159A7FA	Infrastructure	WEP	56
RDTEST	Infrastructure	WEP	48
3Com	Infrastructure	OFF	43
Default	Infrastructure	WPA	74

Wireless Setting	
MAC Address:	00:16:16:16:DD:E1
Mode:	Infrastructure
Operation Mode:	Auto
SSID:	allan
Security:	None
<input type="button" value="Apply"/>	

a. Status of Wireless Networks :

scan all wireless services.

b. Wireless Setting :

1. **Mode** : There are Infrastructure and Ad-hoc. Infrastructure is for connecting with the router. Ad-hoc is for connecting with PC. There is “Channel” to select only when user uses Ad-hoc mode.

e.g. If one PC's channel is 1, the other's channel has to be 1, too.

Wireless Setting	
MAC Address:	00:11:E2:03:37:48
Mode:	Ad-hoc
Operation Mode:	Auto
SSID:	Default
<b>Channel:</b>	6
Security:	None

2. **SSID** : Based on AP setting.
3. **Channel** : This is used only when the user selects Ad-hoc mode in order to avoid conflict.
4. **Security** : It supports “None”, “WEP”, “WPA-PSK” security encryption based on the setting of the Router.
5. **WEP**:

Security:	WEP
<b>WEP Setting</b>	
Authentication:	Open System
Encryption:	64 bit
Key Type:	HEX (10 character max)
Key 1:	<input type="radio"/> <input type="text"/>
Key 2:	<input type="radio"/> <input type="text"/>
Key 3:	<input type="radio"/> <input type="text"/>
Key 4:	<input type="radio"/> <input type="text"/>

- Authentication : There are Open System and Shared Keys, it is based on different encryptions. This has to be the same as the Router’s setting.
- Encryption : There are 64 bits and 128 bits. This is based on Key Type based on the Router’s setting.
- Key Type : There are HEX and ASCII. When selecting HEX, the user only can input 0~9 characters and use A, B, C, D, E, and F.
- When selecting ASCII, the user can input any character.  
(Case sensitive)
- Key 1~4 : Based on Key Type to input characters.


6. **WPA-PSK** :

Security:	WPA-PSK
<b>WPA-PSK Setting</b>	
Encryption	TKIP
Pre-Shared Key:	<input type="text"/> (ASCII format, 8-63)

- Encryption : There are TKIP and AES.
- Pre-Shared Key : Allow any characters. (Case sensitive)

## C. A/V Setting

### i. Image Setting

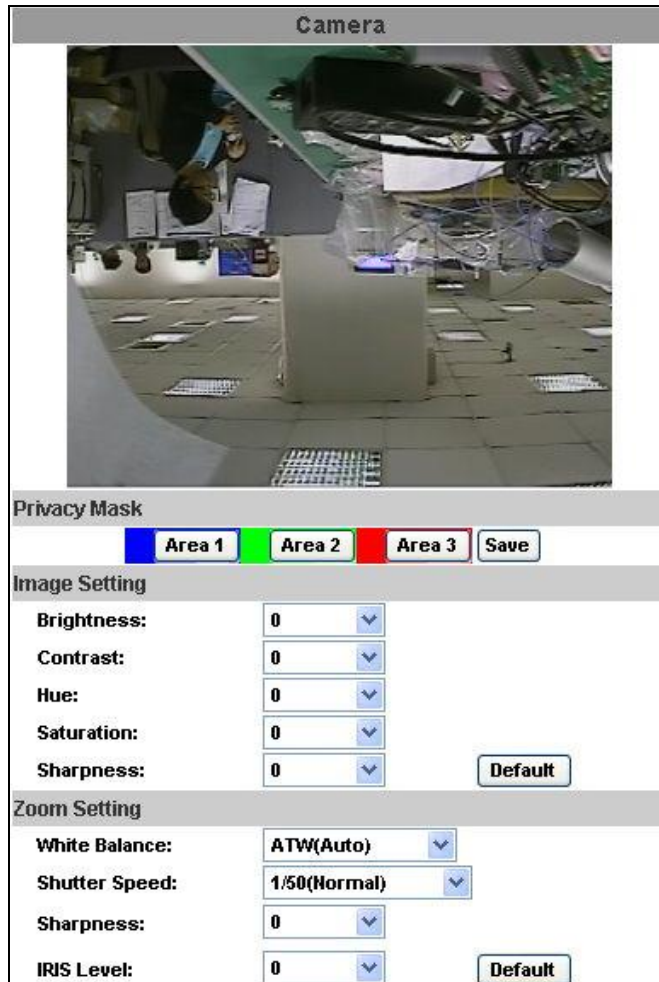

The screenshot displays the 'Camera' configuration page. At the top, there is a live video feed of an indoor space. Below the feed is a 'Privacy Mask' section with three colored buttons: 'Area 1' (blue), 'Area 2' (green), and 'Area 3' (red), along with a 'Save' button. The 'Image Setting' section includes five sliders: 'Brightness', 'Contrast', 'Hue', 'Saturation', and 'Sharpness', all set to 0. A 'Default' button is located to the right of the 'Sharpness' slider. The 'Zoom Setting' section includes four sliders: 'White Balance' (set to ATW(Auto)), 'Shutter Speed' (set to 1/50(Normal)), 'Sharpness' (set to 0), and 'IRIS Level' (set to 0). A 'Default' button is located to the right of the 'IRIS Level' slider.

**Image Setting:** Adjust “Brightness”, “Contrast”, “Hue”, “Saturation” to get clear video.

**Zoom Setting:** Adjust “White Balance”, “Shutter Speed”, “Sharpness”, and “IRIS Level” to get clear video.

**Note:** When Shutter Speed is Auto, the IRIS Level is invalid.

### ii. Video Setting

User may select 2 streaming output simultaneously:

Streaming 1 Setting: Basic mode and Advanced mode

Streaming 2 Setting: Basic mode, Advanced mode, and 3GPP mode

**(Max Video Frame Rate for both streaming combined is 25 FPS)**

- a. Video Orientation : Flip or Mirror
- b. Streaming 1 Basic Mode :

**Streaming 1 Setting**

**Basic Mode**     **Advanced Mode**

**Resolution:**    4CIF - 704x576 ▼

**Quality:**    Best ▼

**Video Frame Rate:**    25 FPS ▼

**Video Format:**    H.264 ▼

**RTSP Path:**        **ex:rtsp://</>/    Audio:G.711**

1. Resolution :

There are 4 resolutions to choose.

		NTSC	/	PAL
D1	–	720x480	/	720x576
4CIF	–	704x480	/	704x576
CIF	–	352x240	/	352x288
QCIF	–	176x120	/	176x144

2. Quality :

There are 5 levels to adjust:

Best/ High/ Standard/ Medium/ Low

The higher the quality is, the bigger the file size is. Also not good for internet transmitting

3. Video Frame Rate : The video refreshing rate per second. The MAX is 25 FPS.
4. Video Format : MPEG4 or JPEG
5. Video Orientation : Flip or Mirror
6. RTSP Path: RTSP output name

c. Streaming 1 Advanced Mode :

**Streaming 1 Setting**

Basic Mode     **Advanced Mode**

Resolution: 4CIF - 704x576

Bitrate Control Mode:  CBR     VBR

Video Quantitative: 9

Video Bitrate: 1.5Mbps

Video Frame Rate: 25 FPS

GOP Size: 1 X FPS    GOP = 25

Video Format: H.264

RTSP Path:     ex:rtsp://</>    Audio:G.711

1. Resolution :

There are 4 resolutions to choose.

	NTSC	/	PAL
D1	– 720x480	/	720x576
4CIF	– 704x480	/	704x576
CIF	– 352x240	/	352x288
QCIF	– 176x120	/	176x144

2. Bitrate Control Mode

There are CBR [ Constant Bit Rate ] and VBR [ Variable Bit Rate ] to use.

CBR : 64Kbps~4Mbps (the higher the CBR is, the better the video quality is)

VBR : 1~10 (Compression Rate)

3. Video Frame Rate

The video refreshing rate per second.


4. GOP Size

It means "Group of Pictures". The higher the GOP is, the better the quality is.

5. Video Format : H.264/ JPEG

6. Access Name: RTSP output connecting route

d. Streaming 2 Basic Mode :

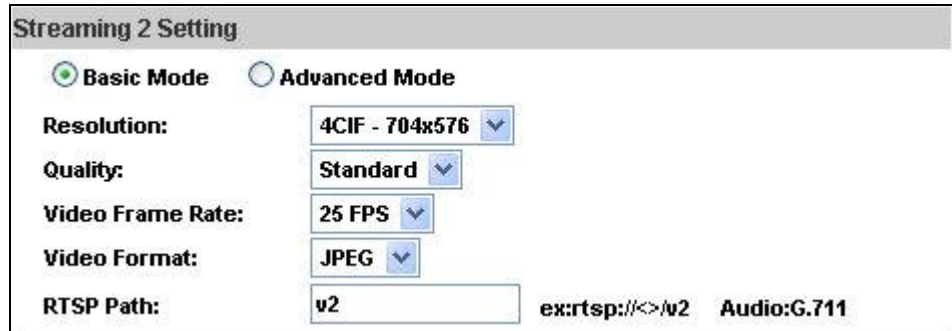

1. Resolution :

There are 4 resolutions to choose.

		NTSC	/	PAL
D1	–	720×480	/	720×576
4CIF	–	704×480	/	704×576
CIF	–	352×240	/	352×288
QCIF	–	176×120	/	176×144

2. Quality :

There are 5 levels to adjust:

Best/ High/ Standard/ Medium/ Low


The higher the quality is, the bigger the file size is. Also not good for internet transmitting

3. Video Frame Rate : The video refreshing rate per second.

4. Video Format : H.264 or JPEG

5. RTSP Path: RTSP output connecting route

e. Streaming 2 Advanced Mode :

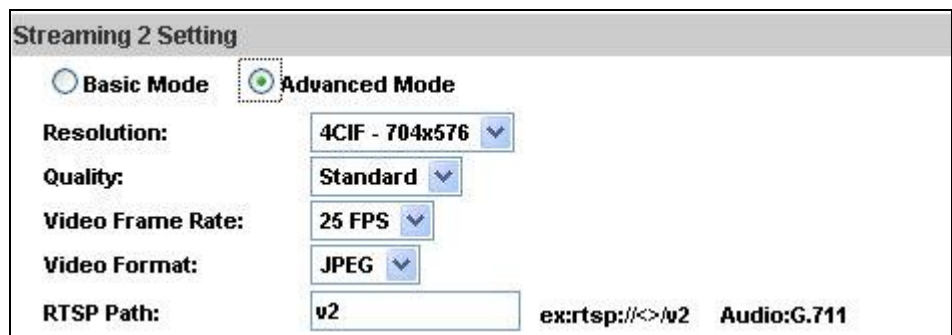

1. Resolution :

There are 4 resolutions to choose.

		NTSC	/	PAL
D1	–	720×480	/	720×576
4CIF	–	704×480	/	704×576

CIF – 352x240 / 352x288  
 QCIF – 176x120 / 176x144

2. Quality :

There are 5 levels to adjust:

Best/ High/ Standard/ Medium/ Low


The higher the quality is, the bigger the file size is. Also not good for internet transmitting

3. Video Frame Rate : The video refreshing rate per second.

4. Video Format : H.264 or JPEG

5. RTSP Path: RTSP output connecting route

f. 3GPP Streaming mode:

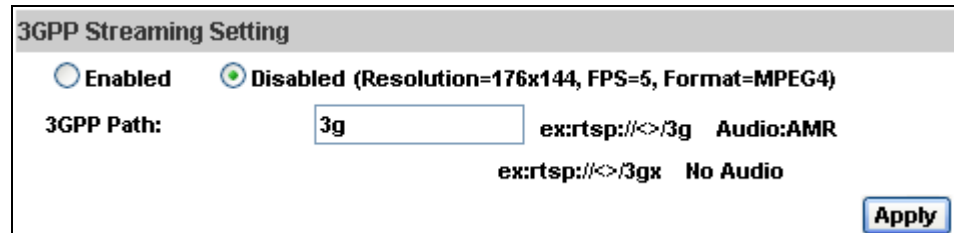

The screenshot shows a dialog box titled "3GPP Streaming Setting". It contains two radio buttons: "Enabled" (unselected) and "Disabled (Resolution=176x144, FPS=5, Format=MPEG4)" (selected). Below the radio buttons, there is a "3GPP Path:" label followed by a text input field containing "3g". To the right of the input field, there are two RTSP path examples: "ex:rtsp://</>3g Audio:AMR" and "ex:rtsp://</>3gx No Audio". An "Apply" button is located in the bottom right corner of the dialog box.

3GPP mode suggested setting: 176x144 resolution, 5FPS, MPEG4 format


1. Enable or Disable 3GPP Streaming

3GPP: 3GPP output name

iii. Audio :


IP Camera supports 2-way audio. User can send audio from IP Camera Built-in mic to remote PC; User can also send audio from remote PC mic to IP Camera's external speaker.

a. Audio from IP camera built-in mic to local PC: select "Enable" to start this function.

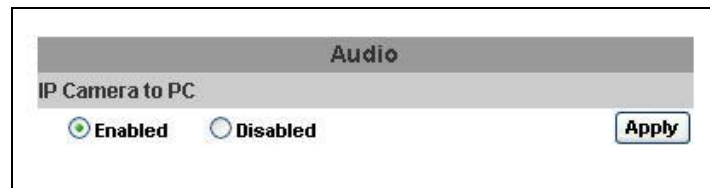

The screenshot shows a dialog box titled "Audio". It has a sub-header "IP Camera to PC". Below this, there are two radio buttons: "Enabled" (selected) and "Disabled" (unselected). An "Apply" button is located in the bottom right corner of the dialog box.

b. Audio from local PC mic to IP camera, check "chatting" in the browsing page.

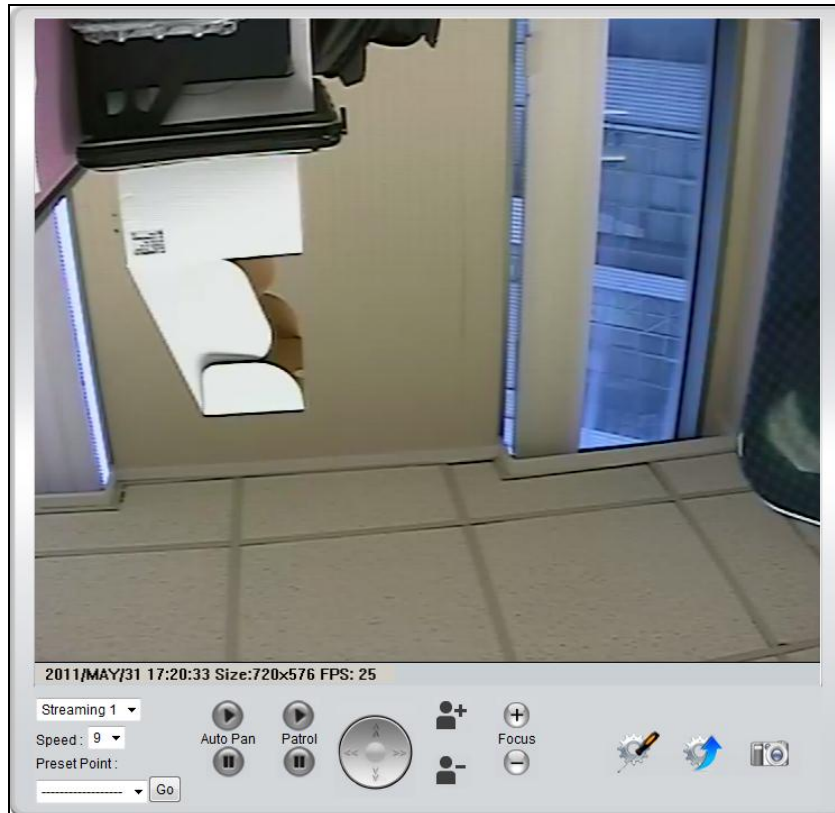

The Audio will not be smooth when enable SD card recording function simultaneously.

## D. Event List

IP Camera provides multiple event settings.

i. Event Setting



a. Motion Detection:

IP CAMERA allows 3 areas motion detection. When motion is triggered, it can send video to some specific mail addresses, transmit the video to remote ftp server, and save video to local SD card. To set up the motion area, click “Area Setting”. Using mouse to drag and draw the area. The same operation for area 2 and 3.

b. Record Time Setting : Pre Alarm and Post Alarm setups for video start and end time when motion detected, I/O, or other devices got triggered

c. Network Dis-connected

When the network is down, it will save the video to local SD card.

**This function is only enabled in wire connection.**

d. Network IP check:

Whenever the connection is down, it records the video to SD card. Make sure the video recording is continuous. To use this function, key in the IP address of the PC which has recording software installed. Enable the function of “Save to SD card”, then click “Apply”.

**The interval of two video files recorded on SD card is fixed with 30 seconds.**

ii. Schedule

- a. Schedule: After complete the schedule setup, the camera data will be recorded according to the schedule setup.
- b. Snapshot: After enable the snapshot function, user can select the storage position of snapshot file, the interval time of snapshot and the reserved file name of snapshot.

Schedule																									
All	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	
Mon.																									
Tue.																									
Wed.																									
Thu.																									
Fri.																									
Sat.																									
Sun.																									

With schedule setup.

Snapshot	
<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled	
Snapshot: <input type="checkbox"/> E-mail <input type="checkbox"/> FTP <input type="checkbox"/> Save to SD card	
Interval: <input style="width: 50px;" type="text" value="10"/> Second(s) [1..50000]	
File Name: <input style="width: 150px;" type="text" value="Snapshot"/>	<input type="button" value="Apply"/>

iii. I/O Setting

IP Camera supports 1 Input/ 1 Output. When input is triggered, it can send the video to some specific mail addresses, transmit the video to remote ftp server, trigger the relay, and save video to local SD card.


I/O Setting	
<b>Input Setting</b>	
Input 1 Action:	<input type="checkbox"/> E-mail <input type="checkbox"/> FTP <input type="checkbox"/> Out1 <input type="checkbox"/> Save to SD card
Subject:	<input type="text" value="GPIO In Detected!"/>
Interval:	<input type="text" value="10 sec"/> <input type="button" value="v"/>
<b>Output Setting</b>	
Mode Setting:	<input checked="" type="radio"/> OnOff Switch <input type="radio"/> Slide Switch
Interval:	<input type="text" value="10 sec"/> <input type="button" value="v"/>
<input type="button" value="Apply"/>	

iv. Mail & FTP

To send out the video via mail of ftp, please set up the configuration first.

Mail & FTP	
<b>Mail Setting</b>	
Mail Server:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Sender's Mail:	<input type="text"/>
Receiver's Mail:	<input type="text"/>
Bcc Mail:	<input type="text"/>
<b>FTP Setting</b>	
FTP Server:	<input type="text"/>
Username:	<input type="text"/>
Password:	<input type="text"/>
Port:	<input type="text" value="21"/>
Path:	<input type="text" value="/"/>
<input type="button" value="Apply"/>	

v. Log List

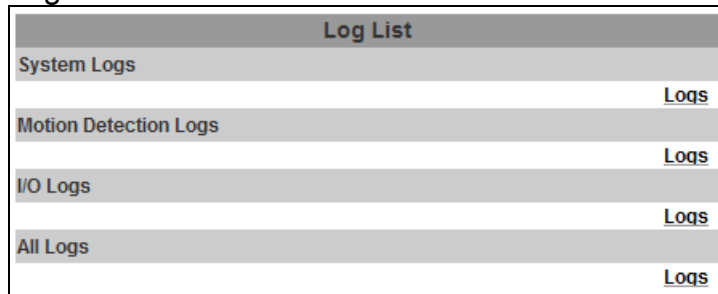

Sort by System Logs, Motion Detection Logs and I/O Logs. In addition, System Logs and I/O Logs won't lose data due to power failure.

vi. SD card

Please Insert SD card before use it. Make sure pushing SD card into the slot completely.

**Note :** The use of the SD card will affect the operation of the IP Camera slightly, such as affecting the frame rate of the video.



a. Playback:



1. It will show the capacity of the SD card. Click the date listed on this page. It will show the list of the video.

2006/04/17			Del
Time	Video	Event Type	<input type="checkbox"/>
09:05:22	090522f.avi	Network Dis-connected	<input type="checkbox"/>
09:05:52	090552f.avi	Network Dis-connected	<input type="checkbox"/>
09:06:22	090622f.avi	Network Dis-connected	<input type="checkbox"/>
09:06:52	090652f.avi	Network Dis-connected	<input type="checkbox"/>
09:07:22	090722f.avi	Network Dis-connected	<input type="checkbox"/>
09:07:52	090752f.avi	Network Dis-connected	<input type="checkbox"/>
09:08:22	090822f.avi	Network Dis-connected	<input type="checkbox"/>
09:08:51	090851f.avi	Network Dis-connected	<input type="checkbox"/>
09:09:21	090921f.avi	Network Dis-connected	<input type="checkbox"/>
09:09:51	090951f.avi	Network Dis-connected	<input type="checkbox"/>

1 2 3 4 5

2. The video format is AVI. Click the video to start Microsoft Media Player to play it.


3. To delete the video, check it, then click **Del**. When the SD card is full, it will remove the oldest video automatically.

## VI. Network Configuration

i - Configuration 1 :


- a. Internet Access : ADSL or Cable Modem
- b. IP address : One real IP or one dynamic IP
- c. Only IP Camera connects to the internet
- d. For fixed real IP, set up the IP into IP Camera. For dynamic IP, start PPPoE.

ii - Configuration 2 :

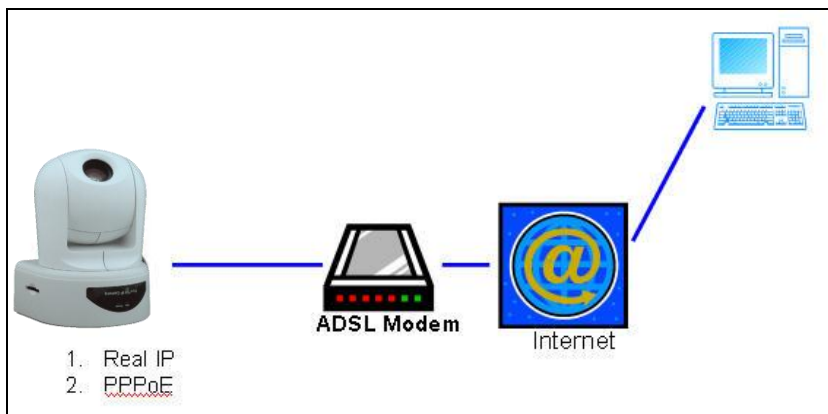

- a. Internet Access : ADSL or Cable Modem
- b. IP address : More than one real IP or one dynamic IP
- c. IP Camera and PC connect to the internet
- d. Device needed : Switch Hub
- e. For fixed real IP, set up the IP into IP Camera and PC. For dynamic IP, start PPPoE.


iii 、 Configuration 3 :

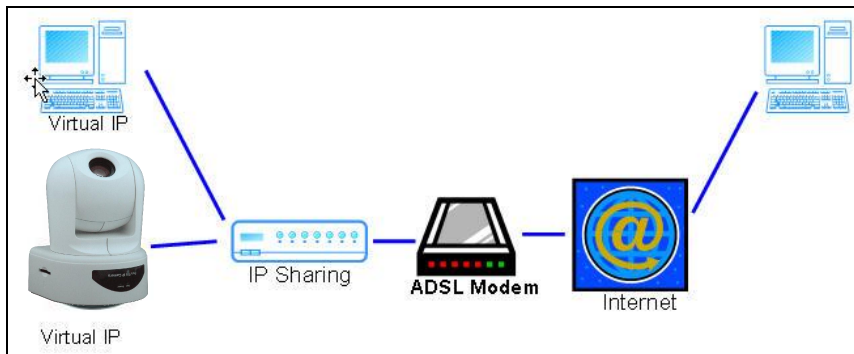

- Internet Access : ADSL or Cable Modem
- IP address : one real IP or one dynamic IP
- IP Camera and PC connect to the internet
- Device needed : IP sharing
- Use virtual IP, set up port forwarding in IP sharing.

## VII. I/O Configuration


i 、 I/O Connection :

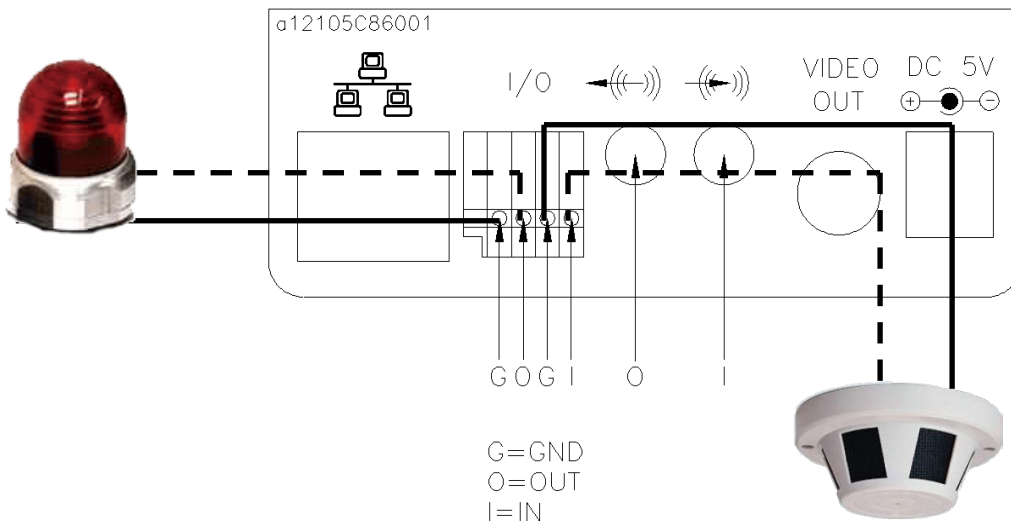


- Please connect the G & O pin ( as above figure) to the external relay (buzzer) device.
- Please connect the G & I pin ( as above figure) to the external Trigger Device.

ii - I/O Setup :

- a. Click I/O Setting from the system setup page via IE, and check “Out1” to enable I/O signal.

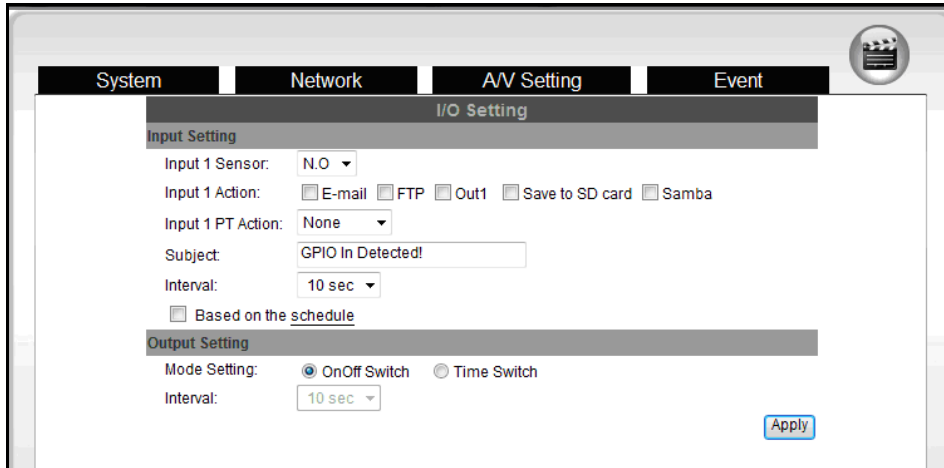


- b. Click ON/OFF from the setup main page via IE to control relay out signal.

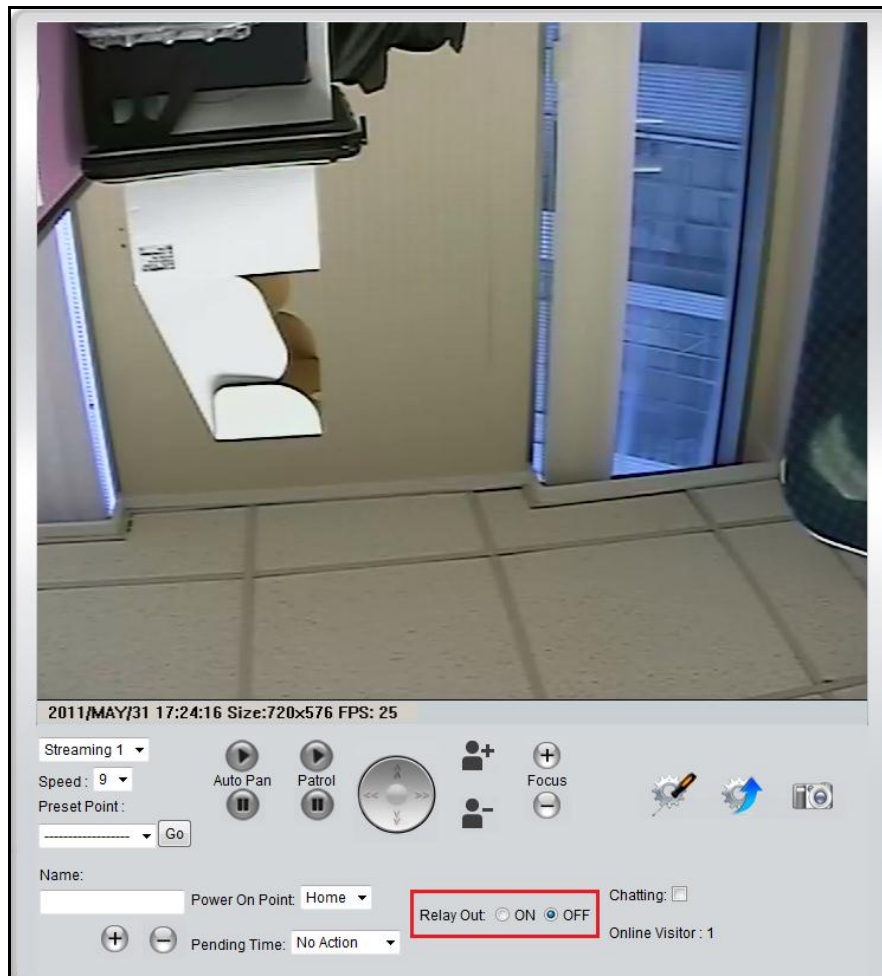

## VIII. Factory Default

- i \ To recover the default IP address and password, please follow the following steps.
- ii \ Remove power, and press and hold the button in the back of IP Camera.

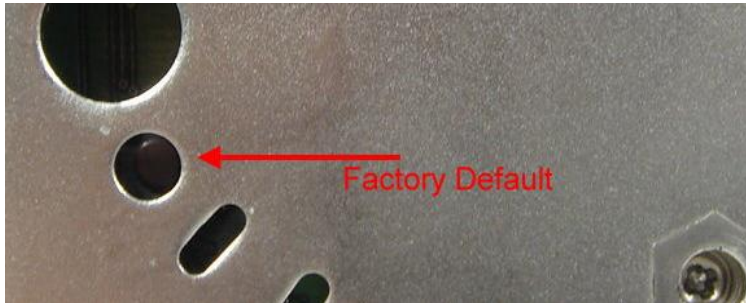

- iii \ Power on the camera. Don't release the button during the system booting.
- iv \ It will take around 30 seconds to boot the camera.
- v \ Release the button when camera finishes proceed.
- vi \ Re-login the camera using the default IP (<http://192.168.1.200>), and user name (admin), password (admin).

## IX. Package contents

- i \ IP Camera Network Camera
- ii \ Adaptor
- iii \ Ethernet Cable
- iv \ CD title (User manual, IP installation Utility)

## Appendix I

SD Card Recommended :

SanDisk 128M	Transcend 128M 80X
SanDisk 256M	Transcend 256M 80X
SanDisk 512M	Transcend 512M 80X
SanDisk 1G	Transcend 1G 80X
SanDisk 2G	Transcend 2G 80X
SanDisk 4G	Transcend 4G 80X